


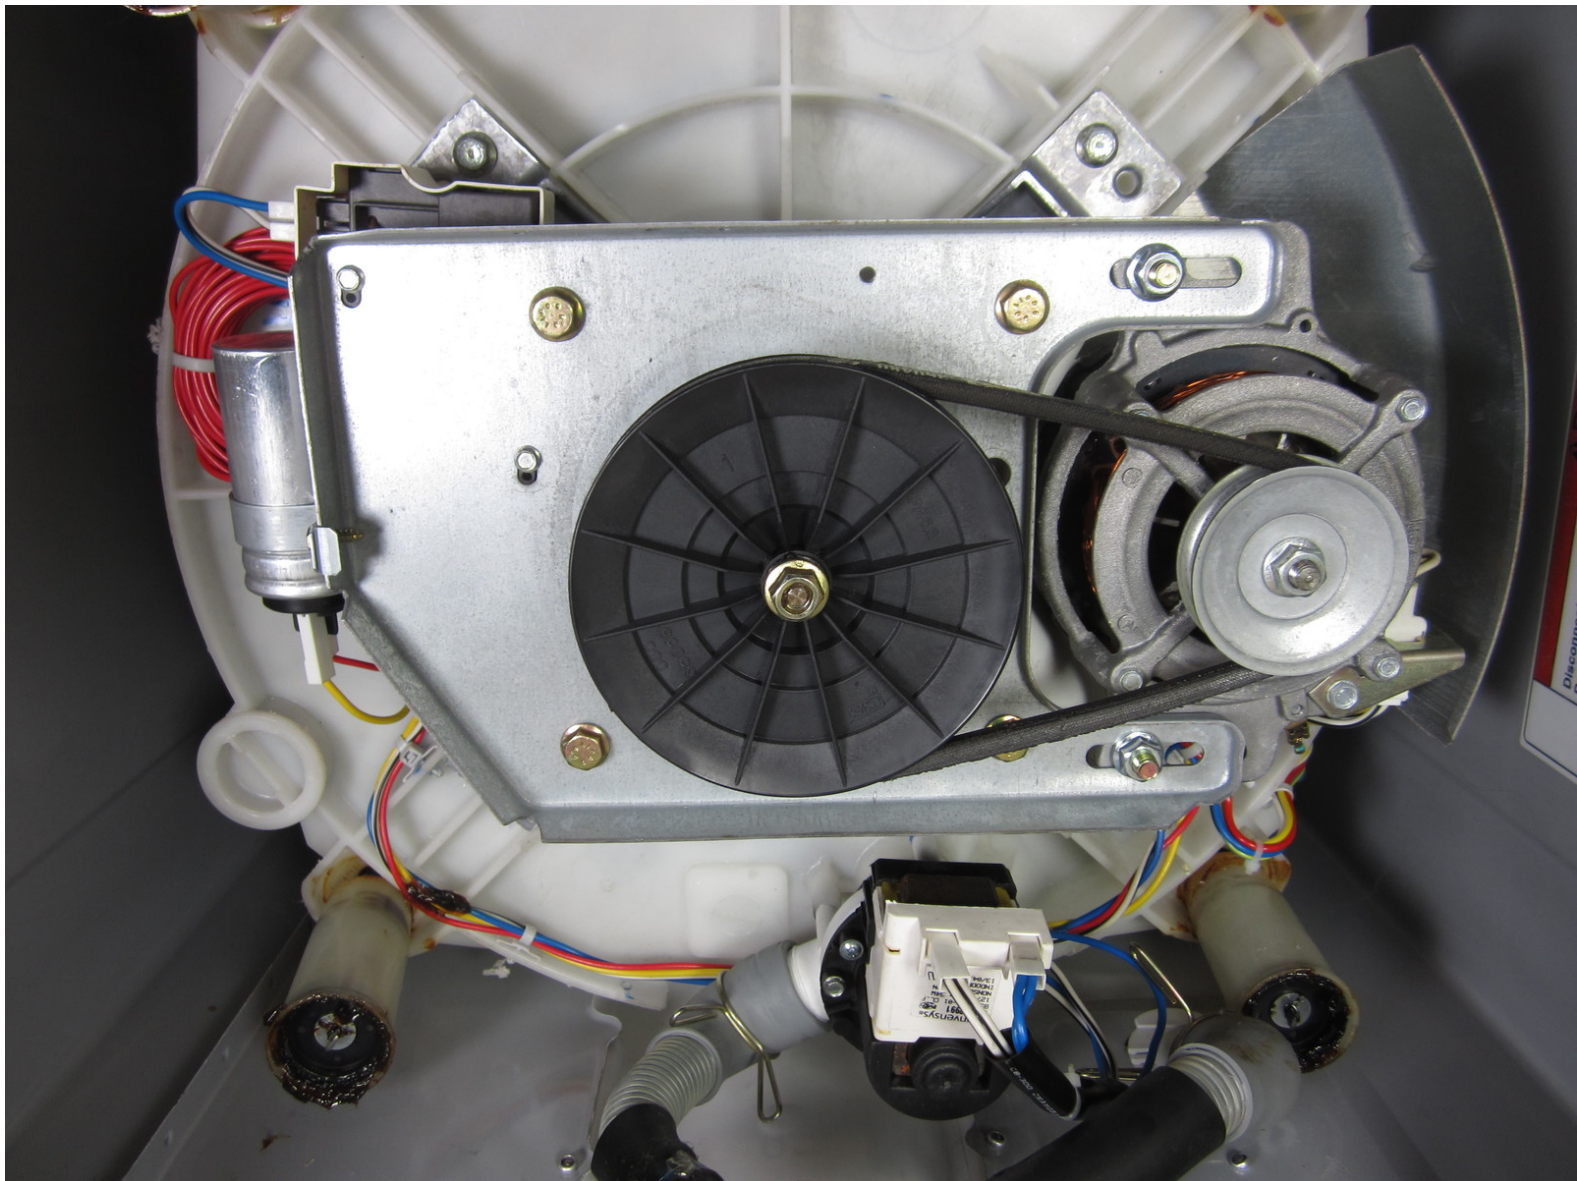

Kenmore 110 Series Washing Machine Drive Belt Replacement

Replace the drive belt in your Kenmore 110 Series Washing Machine.

Written By: Robert Trout



INTRODUCTION


Use this guide to replace a worn drive belt in a Kenmore 110 Series Washing Machine.




TOOLS:

- [5/16" Socket](#) (1)
 - [Socket Wrench](#) (1)
 - [1/2" Socket](#) (1)
-




Step 1 — Drive Belt

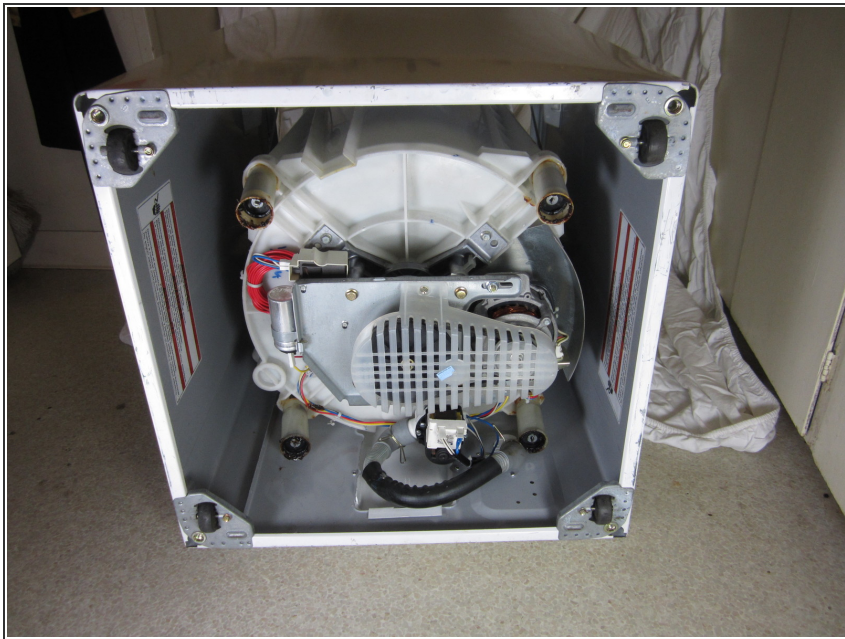

 To avoid risk of electric shock, unplug the washing machine.


- Lay the washing machine on its back.

Step 2

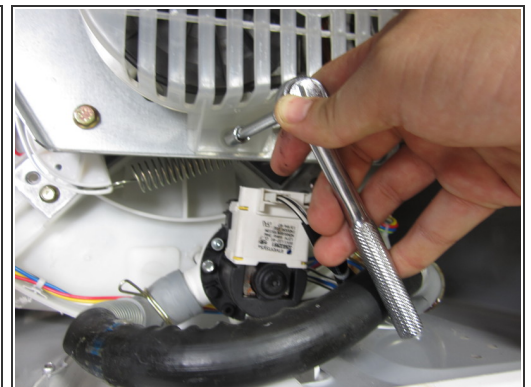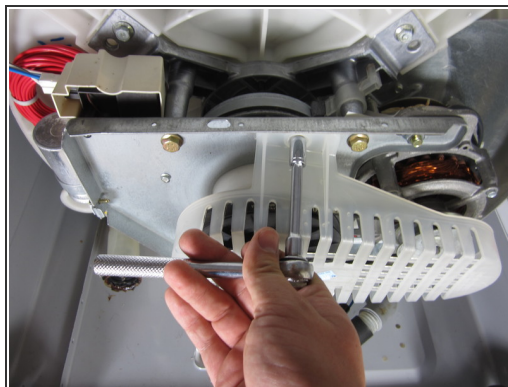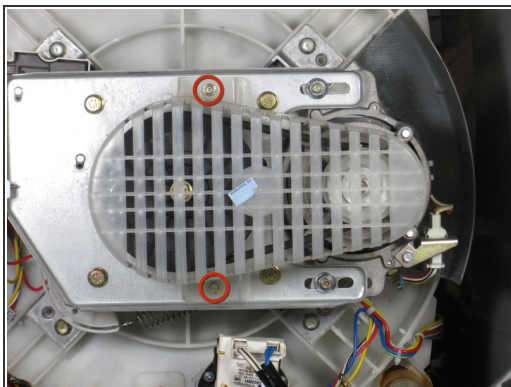

- Using a 5/16" socket wrench, remove both screws from the belt cover.
- Remove the belt cover from the washer.

Step 3

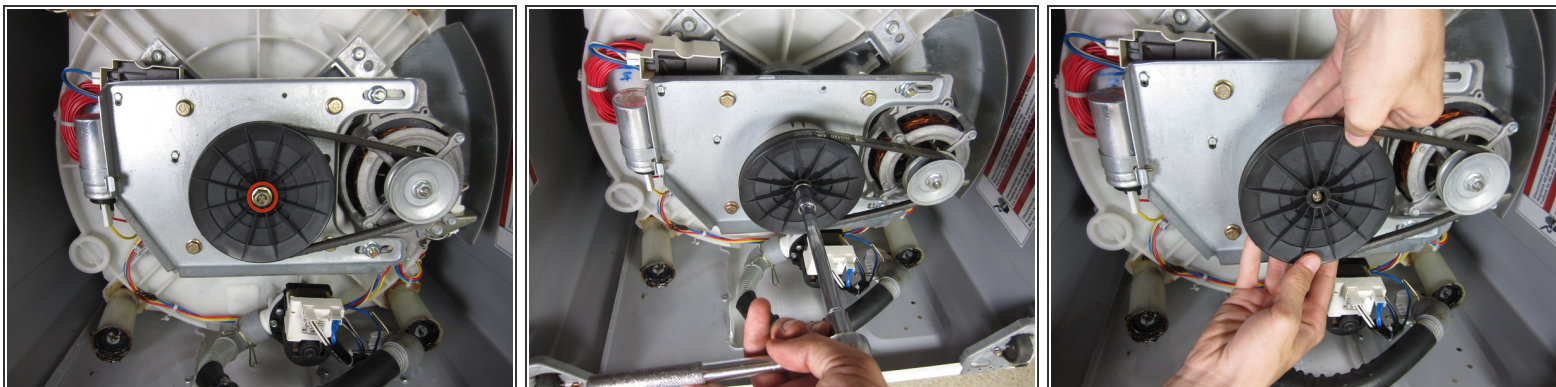

- Using a 1/2" socket, remove the bolt securing the drive pulley.
- Remove the drive pulley and belt.
- ☑ When installing a new belt, wrap the belt around both the motor and drive pulleys before reinstalling the drive pulley.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-16 04:10:06 PM.